PK286 LCK DUMMY BOLT KIT
INSTALLATION MANUAL PK286 LCK仿真槍機安裝指南

STEP-1 REMOVE ORIGINAL BOLT 移除槍機飾片

Detach the dust cover.
分離上機匣蓋。

PLEASE CHECK
THE VIDEO FIRST!

Operation Video

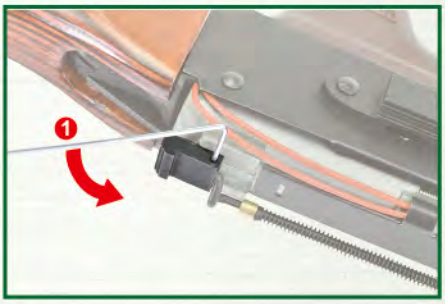

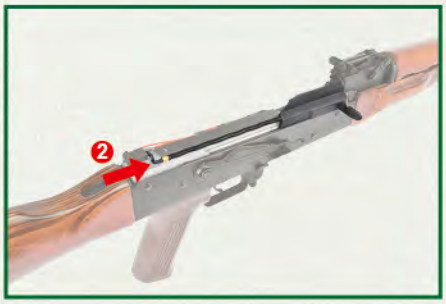

❶ Loosen the screw from receiver catch button by a hex driver.
使用六角板手鬆開機匣扣止付螺絲。

❷ Push the guide pole froward and detach from the button.
將彈簧導桿往前推動使其與機匣扣分離。

❸ Remove the spring assembly.
移除彈簧總成。

❹ Pull the charging handle backward to the end and detach it from the receiver.
拉動槍機拉柄至槍身底部，向上拉起移除。

STEP-2 REMOVE CATCH BUTTON 移除機匣扣

HAND TOOLS 手工具

A. Hammer 鎚

B. Flat screwdriver 一字起子

C. Metal file 金屬銼刀

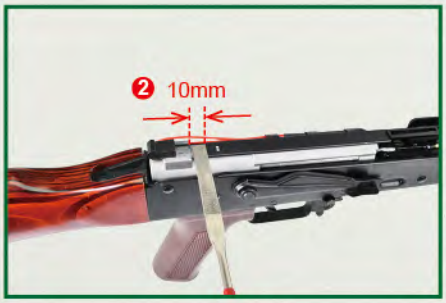

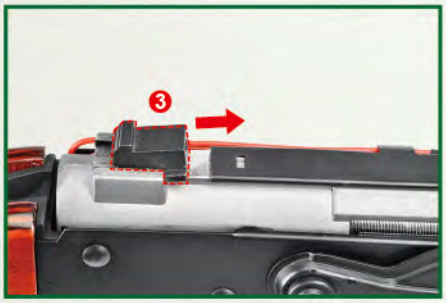

❶ Using a flat screwdriver and hammer,Move the gearbox clip forward until contact with HOP-UP chamber.
使用鐵槌搭配一字起子，將齒輪箱夾片往前推動直到抵住HOP-UP座。

❷ File the area (10mm wide)of gearbox shell to the same level with catch button area.
以銼刀打磨露出的區域(10mm寬)，使其與機匣扣底部平面等高。

❸ Remove the catch button.
移除機匣扣。

STEP-3 INSTALL DUMMY BOLT & SPRING 安裝仿真槍機與覆進簧

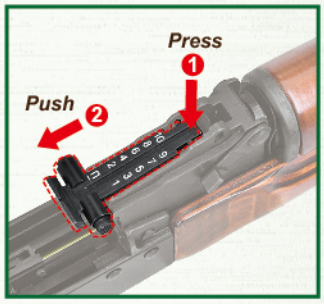

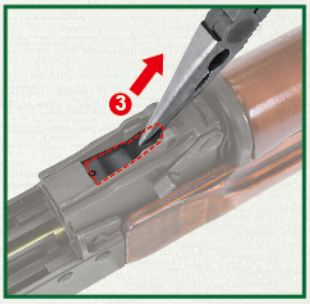

❶ Press the rear sight
❷ downward then push it backward to remove
將表尺下壓並往後推出

❸ Remove the Leaf spring by a needle-nose plier
使用尖嘴鉗移除表尺彈片

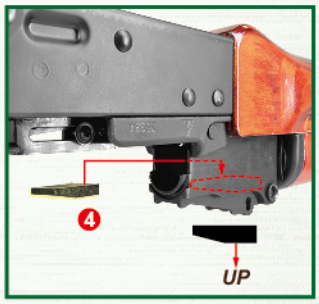

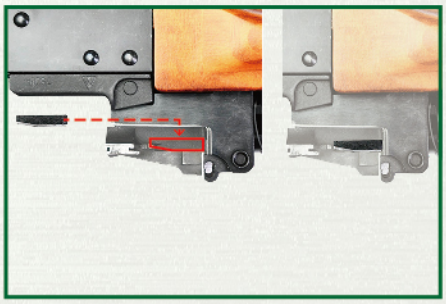

❹ Upside down the receiver. Put the plastic brick into the sight mount by a finger.
將槍身上下顛倒，以手指頭將塑膠塊置入表尺座。

❺ Slide the plastic brick to the position (shown as photo).Let the brick be embed by finger pressing.
將塑膠塊滑動至照片位置，以手指按壓使塑膠塊嵌入表尺座。

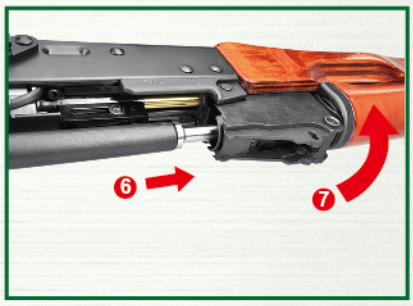

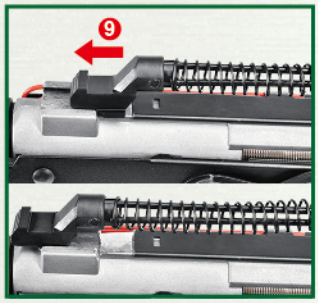

❻ Insert the dummy bolt to the foremost position.
插入裝飾槍機並推動至最前方位置。

❼ Flip over whole gun.
將槍身轉正。

❽ Insert the spring assembly into the dummy bolt.
將覆進簧總成插入裝飾槍機位置。

❾ Slide the catch button back into the mount of gearbox.
將機匣扣推入齒輪箱尾座。

STEP-4 FINISH

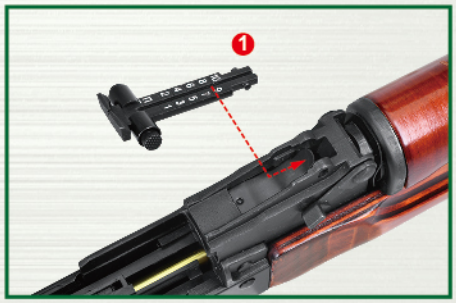

❶ Slide the rear sight back into the mount.
重新安裝表尺。

❷ Attach the cover with receiver.
蓋回機匣蓋。

❸ Pull the charging handle to make sure the dummy bolt slide smoothly.
拉動槍機拉柄數次，確認槍機可順暢移動。

NOTICE 注意事項

PK286 適用電池安裝於後托的LCK槍型，型號如下，非LCT生產型號恕無法安裝：
PK286 is applicable for following LCK models with a power socket in the buttstock. Non-LCT production models cannot be installed:

LCK-47 / LCK-74 / LCK-74M / LCKM / LCKM Economy / LCKM-63 / RPK / TX-5 / TX-63 / TX-M / TX-MIG / LTS-Keymod 9.5 (13.5)